



Go Pro Hero 5 Basic User Guide



A - Mode Button

- Press and hold to turn camera On / off
- Select mode (photo, video, burst, time-lapse, playback, menu)
- Navigate through settings in menu mode

B - Camera Status Screen

- Displays current camera / video mode
- Displays current settings
- Displays number of files captured
- Displays remaining storage available
- Displays battery status

C - Shutter Button

- Take photo / video
- Stop recording video
- Select

D - Open / Close Latch with Lock

- Do NOT open camera housing - please seek assistance from crew

