



Intova HD2 Basic User Guide



A - Power Button

- Press & hold to turn the camera on/off
- Video / Photo / View Mode: Select
- Playback Mode: Exit menu and return to video screen

B - Shutter Button

- Video Mode: Start / stop recording
- Photo Mode: Take image
- Press and hold to turn flash on / off
- Thumbnail View Mode: Select
- Playback Mode: Return to thumbnail view

C - Video Light / Flash

D & F - Up / Down Buttons

- Scroll up / down to select thumbnail to view
- Video / Photo Mode: Adjust digital zoom
- Playback Mode: Speed up / slow down video playback
- Down: One touch to turn off LCD screen
- Zoom in / out

E - Menu / OK Button

- Access Menu
- Select
- Playback Mode: Start / pause video

G - Open / Close Latch with Lock

- Do NOT open camera housing - please seek assistance from crew

