



Olympus TG-4 Basic User Guide



- A - Zoom Lever**
-Zoom in / out
- B - Shutter Lever**
-Take Image
- C - On / Off Button**
- D - Open Close Dial with Lock**
-Do NOT open camera housing - please seek assistance from crew
- E - Info Button**
-Change display
-View date / time etc
- F - Record Button**
-Record Video
- G - Mode Dial Knob**
-Do NOT touch. Camera is already set to underwater mode
- H - Play Button**
-View images / videos
- I - Arrow Pad Up**
-Scroll up
- J - Flash / Arrow Pad Right**
-Flash on / off
-Scroll right
- K - OK / Auto Focus Lock Button (in video mode)**
-Select
- L - Delete / Arrow Pad Down**
-Delete media
-Scroll down
- M - Menu**
-Open menu
-Back button
- N - Arrow Pad Left**
-Scroll left